

**Step by Step
 Operating Manual
 Demon Tornado
 Bowser
 (Petrol Version)**

1



Remove clevis pin on lid of Bowser and open double lid

2



Fill the Bowser with water and replace the lid and clevis pin

3



Check the oil in the pump – note the min and max lines.

4



Check the oil in the gear box – note the min and max lines.

5




Check the engine oil. Replenish as required.

6



Check petrol and fill as required.

7

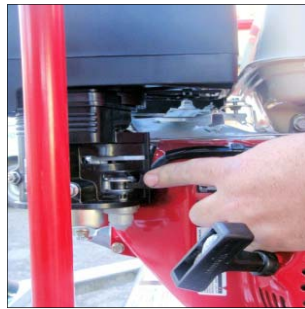


Move the fuel lever to the 'on' position.

8



If starting from cold move the choke lever to the 'on' position

9

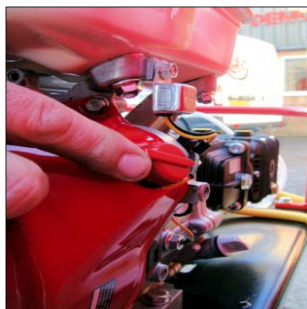


Switch the motor to the 'on'/Start position

10



Pull the recoil to start the machine.

11

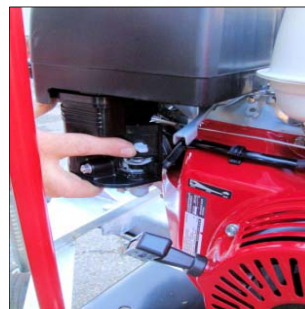

Once the machine is running gently turn the choke to the 'off' position



Hire Station

Tools for Industry, Construction & DIY

Operating the Tornado Bowser

1



Pull pin on hose reel to release hose.

2




Remove lance from holder and pull hose off to desired length

3



Replace the pin to lock the hose reel in place and begin work.

4

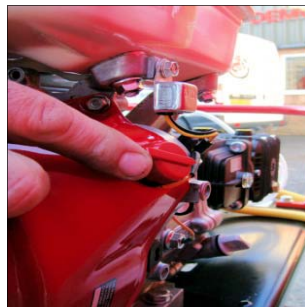

When finished turn the motor switch to 'off'

5



Release any pressure in the hose by squeezing the trigger.

6



Release pin on hose reel and wind hose in and replace pin.

7




Replace lance in holder.

8



To empty the water – go to the underneath at the rear of the Bowser.

9

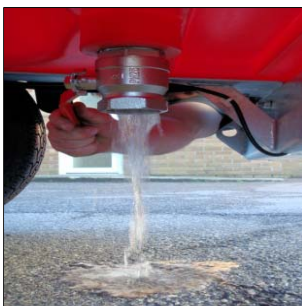

Turn the handle to the downward position and the water will release.

10



To transport – ensure fuel is to the 'off' position

Step by Step Operating Manual Demon Tornado Bowser P3 of 3




Hire Station

Tools for Industry, Construction & DIY

Attaching the Bowser to a tow hitch

1

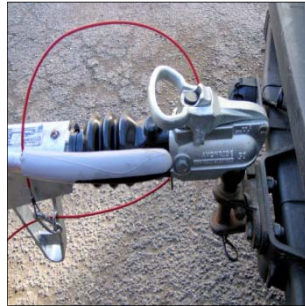

Place the tow hitch over the ball hitch on the tow bar

2




Hold up bowser handle, push button and lift hitch to release lock.

3



Turn jockey wheel & lower onto ball hitch.

4

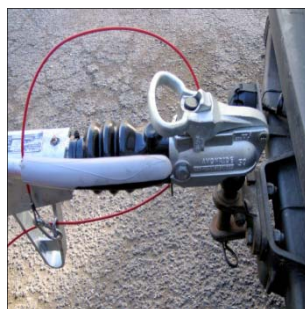

Release handle to lock into place around ball hitch.

5



Turn jockey wheel clamp anti-clockwise until pin in place with U

6




Lift jockey wheel & turn jockey wheel clamp to tighten.

7



Unlock safety brake cable & thread around tow bar.

8

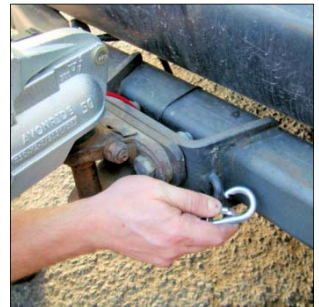

Attach to tow bar ring if possible or back around safety brake cable.

9



Attach the lighting board plug to socket on tow bar.

10



Check all lights are working before towing.

11

To detach from tow hitch, follow the steps in reverse.